


Адаптер с внутренней/наружной резьбой BSP 60°.


Стандарт: ISO 228-PF

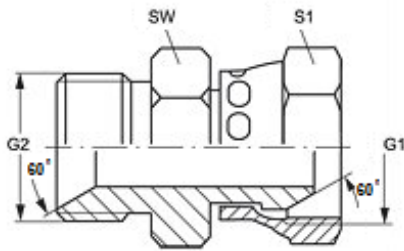

Наименование (сталь)	Наименование (нерж. сталь)	Резьба BSP		Размер (мм)	
		G1	G2	S1	SW
705-02-02	705i-02-02	1/8	1/8	14	14
705-02-04	705i-02-04	1/4	1/8	19	14
705-04-02	705i-04-02	1/8	1/4	14	19
705-04-04	705i-04-04	1/4	1/4	19	14
705-04-06	705i-04-06	3/8	1/4	22	19
705-04-08	705i-04-08	1/2	1/4	27	19
705-06-04	705i-06-04	1/4	3/8	19	22
705-06-06	705i-06-06	3/8	3/8	22	19
705-06-08	705i-06-08	1/2	3/8	26	22
705-08-04	705i-08-04	1/4	1/2	19	27
705-08-06	705i-08-06	3/8	1/2	22	27
705-08-08	705i-08-08	1/2	1/2	27	22
705-08-10	705i-08-10	5/8	1/2	30	22
705-08-12	705i-08-12	3/4	1/2	32	32
705-10-08	705i-10-08	1/2	5/8	26	30
705-10-10	705i-10-10	5/8	5/8	30	30
705-10-12	705i-10-12	3/4	5/8	32	30
705-12-08	705i-12-08	1/2	3/4	27	32
705-12-10	705i-12-10	5/8	3/4	27	32
705-12-12	705i-12-12	3/4	3/4	32	27
705-12-16	705i-12-16	1	3/4	38	32
705-16-12	705i-16-12	3/4	1	32	41
705-16-16	705i-16-16	1	1	41	35
705-16-20	705i-16-20	1 1/4	1	50	41
705-20-16	705i-20-16	1	1 1/4	38	50
705-20-20	705i-20-20	1 1/4	1 1/4	50	44
705-24-20	705i-24-20	1 1/4	1 1/2	50	55
705-24-24	705i-24-24	1 1/2	1 1/2	55	50
705-32-24	705i-32-24	1 1/2	2	55	70
705-32-32	705i-32-32	2	2	70	70

Адаптер с внутренней резьбой BSP 60°.

Стандарт: ISO 228-PF

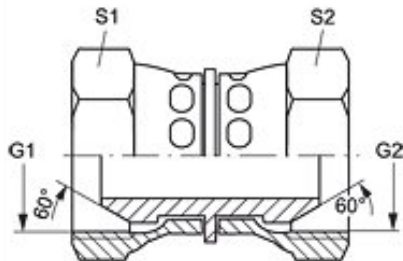

Наименование (сталь)	Наименование (нерж. сталь)	Резьба BSP		Размер (мм)	
		G1	G2	S1	S2
707-02-02	707i-02-02	1/8	1/8	14	14
707-04-04	707i-04-04	1/4	1/4	19	19
707-04-06	707i-04-06	1/4	3/8	19	22
707-04-08	707i-04-08	1/4	1/2	19	27
707-06-06	707i-06-06	3/8	3/8	22	22
707-06-08	707i-06-08	3/8	1/2	22	27
707-08-08	707i-08-08	1/2	1/2	27	27
707-08-12	707i-08-12	1/2	3/4	27	32
707-10-10	707i-10-10	5/8	5/8	30	30
707-12-12	707i-12-12	3/4	3/4	32	32
707-16-12	707i-16-12	1	1/2	41	32
707-16-16	707i-16-16	1	1	41	41
707-16-20	707i-16-20	1	1 1/4	41	50
707-20-20	707i-20-20	1 1/4	1 1/4	50	50
707-24-24	707i-24-24	1 1/2	1 1/2	55	55